

 
LYNGDORF AUDIO CD-2

QUICK
GUIDE

Contents:


WHAT IS IN THE BOX	3
FRONT PANEL	4
REAR PANEL.....	5
REMOTE CONTROL.....	6
MENU SYSTEM	7
TECHNICAL ASSISTANCE	8

What is in the box

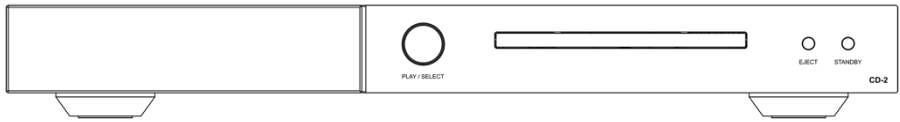

CD-2

 Accessories

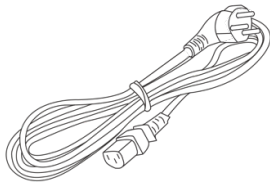

Mains cord



 
Remote control

Front panel



1. Play / Select
 - Push to Play and Pause. In the menu mode pushing is used as the select-function.
 - Holding down the button will access the main menu.
 - Turn the wheel to skip left and right between tracks or menu items.
2. Eject
3. On / Standby

Rear panel

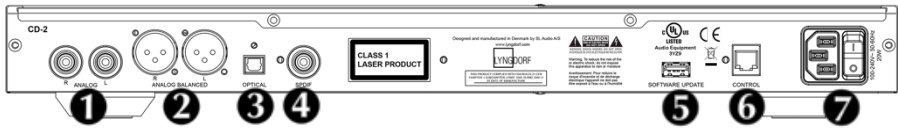

1. Analog output right and left
RCA Connectors
2. Analog balanced output right and left
XLR Connectors for balanced output
3. Optical output
Toslink Connector for digital output
4. S/PDIF output
5. USB software update connector
6. RS 232 for external control
RJ11 connector
7. Mains Input

Remote control

To control the CD player the CD key should be pressed.

1. Eject
2. On / Standby
3. Numerical buttons 0-9
Direct selection and input of tracks on CD.
4. CD
Selects the remote for operation with a Lyngdorf CD Player.
5. Up / Down / Left / Right
Scrolls through the menu functions.
6. Enter
Confirms actions in menu mode.
7. Info
Toggles between showing additional CD information (e.g album name, song name, and artist), if available.
8. Menu
Activates or de-activates the Menu system.
9. Skip / Scan / Play / Pause
10. Random / Stop / Repeat



Menu system

CD Play Mode

- Normal Play
- Repeat Entire Disc
- Repeat One Track
- Random Play

CD-Text Display

Shows additional CD information if available.

Time Display

Show Remaining Time:

- Yes
- No

Dig. Out Sample Rate

Chooses the sample rate of the digital outputs.

- 44.1 kHz (16 bit, no sample rate conversion)
- 48 kHz (24 bit)
- 96 kHz (24 bit)(default)
- 192 kHz (24 bit)

Analog Out Gain

Adjusts gain on the analog outputs in 0.5 dB steps from -12.0 dB to 0.0 dB.

Display Timeout

The timeout can be set to On or Off. On is a 10 second display timeout.

Auto Off

Auto off will automatically turn off the CD-2 after it being idle for 5 minutes.

Advanced

- Software info: Displays the firmware version.
- Power On State: When the CD-2 is turned on it can either play the CD automatically or standby.
- Factory Reset: Resets the CD-2 to the factory default settings
- Software update: Updates the software from a USB stick

Exit Menu

Exits the menu.

Technical assistance

For the latest version of this manual, please check the Lyngdorf website: www.steinwaylyngdorf.com. If you have any questions regarding your Lyngdorf product, please contact your nearest Lyngdorf representative or:

SL Audio A/S

Ulvevej 28

7800 Skive

Denmark

E-mail: contact@steinwaylyngdorf.com

Web: www.lyngdorf.steinwaylyngdorf.com